



# APS25Z

## Vehicle Security / Keyless Entry System

### Installation and Reference Guide

Thank you for trusting Prestige products! **If you are a consumer, please note: Professional installation is strongly recommended.**

This manual assumes the installer has adequate knowledge of the following expertise. Therefore, it does not cover these topics in detail:

- **12-volt electronics**
- **Testing and verifying circuits**
- **Making safe and lasting wiring connections**
- **Factory ignition, power, lighting, data bus and sensing systems**
- **Factory systems and components to avoid**
- **Safe wire routing, circuit protection and product placement**
- **Access to vehicle-specific technical information**

In addition, this manual assumes the installer has the **proper tools, skill and facilities** to perform a professional installation. **Performing an improper installation could result in damage to the vehicle or its components, improper system function, unsafe vehicle operation or physical injury.** Such instances would not be covered by the vehicle manufacturer's warranty, nor by Voxx Electronics, Inc.

#### Detailed Descriptions

- 2 Wire Harness Colors and Functions**
  - 2 Main Input / Output Connector
  - 3 Door Lock Connector
- 4 External Components**
  - 4 Shock Sensor
  - 5 LED / Valet Programming Button
- 4 System Operation**
  - 4 Remote Operation
  - 4 Alarm Override Procedures
- 5 Setup Options**
  - 5 Remote Programming
  - 6 Security Control

 
#### Quick Reference

- 8 System Programming**
  - 8 Programming Mode Entry / Exit
  - 9 Feature Bank Options
  - 9 Dome Light
  - 9 Silent Arm and Disarm
  - 9 User Selectable LED
- 9 System Diagnostics**
  - 9 Troubleshooting Trigger Zones
  - 9 Adjusting Shock Sensor
- 11 Wiring Diagrams**
  - 11 Door Lock Connections
  - 14 Starter Kill Relay
  - 25 Full System Connections

# Detailed Descriptions: Wire Harness Colors and Functions

## Main Input / Output Connector (11-pin connector) [See page 15 for the full system diagram.](#)

These wires are listed in order of their placement in the harness connector.



### 1. WHITE – Parking Light Relay Output (Internal Relay Pin 30)

At its default setting, the WHITE wire supplies 12-Volt (+) or Ground (-) to the vehicle's park light wire based on the connection of the relay input (WHITE/RED wire).

*Verification:* The vehicle parking light wire registers 12-Volt (+) or Ground (-) when the park lights are turned on.

**Note:** This wire can be programmed to perform the **Trunk Release Output** function by changing its options. [Refer to Bank 2, Feature 6 on page 8.](#)

### 2. WHITE/RED – Parking Light Relay Input (Internal Relay Pin 87)

The WHITE/RED connects to vehicle 12-Volt (+) or Ground (-) to supply the relay output (WHITE wire).

*Verification for default setting:*

- If the vehicle parking light wire registers 12-Volt (+) when the park lights are on, connect the WHITE/RED wire to a constant 12-Volt (+) vehicle wire.
- If the vehicle parking light wire registers Ground (-) when the park lights are on, connect the WHITE/RED wire to a reliable vehicle ground source.

**Note:** This wire can be programmed to perform the **Trunk Release Output** function by changing its options. [Refer to Bank 2, Feature 6 on page 8.](#)

### 21. DARK BLUE – Trunk Release Output (-)

At its default setting, the DARK BLUE wire connects to the vehicle trunk release wire or relay and supplies Ground (-) when activated from the remote control.

*Verification:* The vehicle trunk release wire registers 12-Volt (+) or Ground (-) when the trunk release button is activated.

**Note:** This wire can be programmed to perform the **Parking Lights Output** function by changing its options. [Refer to Bank 2, Feature 6 on page 8.](#)

### 4. WHITE/BLACK – Siren Output (+)

The WHITE/BLACK wire supplies 12-Volt (+) to power the siren. After mounting the siren, connect its BLACK wire to a reliable ground source, and connect the BROWN wire to the siren's RED wire.

### 5. RED – 12-Volt Input (+)

The RED wire connects to the vehicle's primary 12-Volt (+) wire to power the system.

*Verification:* The power wire registers 12-Volt (+) at all times.

**Note:** Before making this connection, remove all module fuses until the system is completely connected.

### 6. BLACK – Ground Input (-)

The BLACK wire connects to a reliable vehicle ground (-) source to power the system.

*Verification:* The vehicle ground (-) source wire registers ground (-) at all times.

**Note:** Before making this connection, remove all module fuses until the system is completely connected.

# Detailed Descriptions: Wire Harness Colors and Functions

## Main Input / Output Connector (11-pin connector) [See page 15 for the full system diagram.](#)

These wires are listed in order of their placement in the harness connector.

### 7. YELLOW – Ignition Input (+)

The YELLOW wire connects to the vehicle's primary ignition wire. This wire will be used for system programming and override.

*Verification:* This ignition wire registers 12-Volt (+) when the key is in the accessory, ignition, and start positions.

**Note:** Before making this connection, remove all module fuses until the system is completely connected.

### 8. LIGHT GREEN – Instant Trigger Input(-)

The LIGHT GREEN wire connects a device or switch that, when triggered, supplies a Ground (-) output. If the system is armed, this input will trigger the alarm.

### 9. BROWN – Door Trigger Input (-)

The BROWN wire connects to the vehicle's door trigger wire. This wire will detect Ground (-) input.

*Verification:* The vehicle door trigger wire registers Ground (-) when a door is opened and opposite when closed.

**Note:** If the door registers as 12-Volt (+) when the door is opened, use the PURPLE (Pin 3) input.

### 10. PURPLE – Door Trigger Input (+)

The PURPLE wire connects to the vehicle's door trigger wire. This wire will detect a 12-Volt (+) input.

*Verification:* The vehicle door trigger wire registers 12-Volt (+) when a door is opened and opposite when closed.

 
**Note:** If the door trigger registers as Ground (-) when a door is opened, use the BROWN, Pin 8, input.

### 11. ORANGE – Starter Kill Output N.C. (-)

The ORANGE wire supplies Ground (-) when the alarm is armed.

## Door Lock Connector (2-pin connector) [See page 15 for the full system diagram.](#)

These wires are listed in order of their placement in the harness connector.



### 1. RED – Door Lock (-)

The RED wire supplies Ground (-) when the Lock function is activated from the remote control or system.

*Verification:* The vehicle lock wire registers 12-Volts (+) or Ground (-) when the Lock button is activated.

**Note:** Additional parts may be required. See Page 11 for common door lock wire diagrams.

### 2. GREEN – Door Unlock (-)

The GREEN wire supplies Ground (-) when the Unlock function is activated from the remote control or system.

*Verification:* The vehicle lock wire registers 12-Volt (+) or Ground (-) when the Unlock button is activated.

**Note:** Additional parts may be required. See Page 11 for common door lock wire diagrams.

# Detailed Descriptions: External Components & Operation

## Shock Sensor

The shock sensor plugs into a 4-pin connector on the Prestige module. It should be securely attached to a vehicle surface or sturdy wire harness. Testing takes place after all connections are made and the system is powered up. [Refer to Quick Reference: System Diagnostics on page 10](#) for instructions on testing and adjusting the shock sensor.

## LED / Valet Programming Port


The LED / Valet Programming port is used to for feature programming and Valet Override.

1. Find a suitable location to mount the supplied LED / Valet Programming button. Locate a clear spot on the vehicle's dashboard that will be seen from the outside of the vehicle.
2. Drill a 5/16 inch hole and mount the LED / Valet button. Route the wires to module and plug into proper location.

## Remote Control Operation

This system includes two (2) 1-Way three (3) button remotes. The matrix below describes the basic functions of each remote. See Owners Guide for complete remote operation matrix.

Three Button Remotes (1-Way)

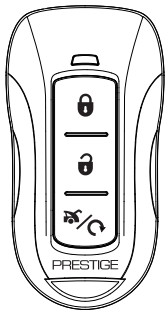

Button	Action	Function
🔒	Press 1x	Lock
	Hold 3 Seconds	Panic ON/OFF
🔓	Press 1x	Unlock
	Hold 3 Seconds	Panic ON/OFF
🚗/🔓	Press 2x	No Function
	Hold 3 Seconds	Trunk Release

## Valet Alarm Override

The Valet Override procedure will disable the alarm when the remote is not available or has become inoperative. If the vehicle door is opened without disarming, the alarm will sound and the vehicle will not start when attempting to start with the key. To disable the alarm:

1. Turn the vehicle ignition to ON.
2. Within 5sec, press and release valet button on Antenna 1x.

The alarm will silence and the vehicle will now start normally with the key.

# Detailed Descriptions: Setup Options

## Bank 1: Add / Remove Remote Controls

Remote programming is located in Feature Bank 1. This system will Auto Program basic functions of the remote with one (1) button press. Basic functions are channels 1-3, Lock, Unlock, and Trunk / Start.

Feature Bank 1		Description	
CH	1	Lock	Press Lock button on remote
	2	Unlock	Press Unlock button on remote
	3	Trunk/Start	Press Start button on remote

### **To Auto Program a remote control:**

1. Turn the ignition key to ON.
2. Press and release the valet/override button three (3) times. The system will beep one (1) time, indicating you have accessed Bank 1, Remote Programming.
3. Press the Lock button of each remote control you wish to program. The system will beep one (1) time when each remote control is added.
4. Press and release the valet/override button one (1) time. The system will beep two (2) times.
5. Press the Unlock button of each remote control you wish to program. The system will beep one (1) time when each remote control is added.
6. Press and release the valet/override button one (1) time. The system will beep three (e) times.
7. Press the Trunk button of each remote control you wish to program. The system will beep one (1) time when each remote control is added.
8. Turn the ignition key to OFF to exit programming mode, or cycle the ignition key OFF/ON to advance to the next Feature Bank.

### **To delete a remote control:**

This system will store a **maximum of four (4) remote controls** in the memory. Additional programmed remote controls will delete the oldest-programmed remote control.

### **Deleting All Remotes:**

1. Perform steps 1-3 above.
2. Press and Hold the Valet/Override Button for five (5) seconds.
3. The system will sound one (1) long beep. This indicates all remotes have been deleted from memory.

### **Notes:**

- The system will store in the memory a **maximum of four (4) remote controls**. Additional programmed remote controls will delete the oldest-programmed remote control.
- During normal operation, the **Programmed Transmitter Notification (PTN) function** indicates how many remote controls are programmed by flashing the LED a certain number of times when the vehicle ignition is turned on.

# Detailed Descriptions: Setup Options

## Security Control (Bank 2) [See page 8 for Programming Instruction.](#)

Feature Bank 2		Options					
		1 Chirp	2 Chirp	3 Chirp	4 chirp	5 Chirp	6 Chirp
Features	1	Lock / Unlock Function	500ms	3.5sec	500ms L, Dbl UL		
	2	Accessory Lock	OFF	ON			
	3	Accessory Unlock	OFF	ON			
	4	Auto Relock	OFF	Auto Lock	Auto Lock & Arm		
	5	Auto Arming	OFF	Auto Arm	Auto Lock & Arm		
	6	Parking Light/Trunk Swap	OFF	ON			
	7	Silent Choice	OFF	From Transmitter	OEM Style		
	8	Exterior Illumination	OFF	With Arm	With Disarm	With Arm & Disarm	

### Feature 1: Lock / Unlock Function

Function: **Set the lock / unlock output timing and functionality for specific vehicle lock types.**

Setting Choices:

- **Option 1** - Lock and Unlock outputs will pulse for **500 milliseconds**.
- **Option 2** - Lock and Unlock outputs will pulse for **3.5 seconds**.
- **Option 3** - **Lock** output will pulse for **500ms** ; **Unlock** output will pulse twice, **500ms each**.
- **Option 4** - **Lock** output will **pulse twice, 500ms each** ; **Unlock** output will pulse for **500ms**.
- **Option 5** - Lock and Unlock outputs will **pulse twice for 500ms**.
- **Option 6** - **Lock** output will pulse for **500ms** ; **Unlock** output will pulse for **350ms**.

### Feature 2: Accessory-Activated Lock

Function: **Set the door locks to lock after the ignition is turned ON.**

Setting Choices:

- **Option 1** - **Doors do not lock** with ignition on.
- **Option 2** - **Doors Lock** with **ignition on**.

### Feature 3: Accessory-Activated Unlock

Function: **Set the door locks to unlock when the ignition is turned off with the key.**

Setting Choices:

- **Option 1** - **Doors do not unlock** with ignition **off**.
- **Option 2** - **All Doors Unlock** with ignition **off**.

### Feature 4: Auto ReLock Setting

Function: **Set the doors to re-lock if the system has been accidentally disarmed.**

Setting Choices:

- **Option 1** - Auto ReLock is **disabled**.
- **Option 2** - If the system has been disarmed but no doors have been opened in 3 minutes, the system will **relock the doors but not re-arm** the alarm.
- **Option 3** - If the system has been disarmed but no doors have been opened in 3 minutes, the system will **relock the doors and re-arm** the alarm.

**Note:** This feature is not associated with the Auto Arming / Locking.

# Detailed Descriptions: Setup Options

## Security Control (Bank 2) (cont.) [See page 8 for Programming Instruction.](#)

### Feature 5: Automatic Arming

Function: **Set the system to arm automatically after exiting the vehicle.**

Setting Choices:

- **Option 1** - System will **arm and doors will lock only when the alarm is armed from the remote control.**
- **Option 2** - System will **arm automatically 1 minute after the last door is closed**, and when the alarm is armed from the remote control.
- **Option 3** - System will **arm and lock doors automatically 1 minute after the last door is closed**, and when the alarm is armed from the remote control.

### Feature 6: Park Light / Trunk Relay Function

Function: **Reverse the functionality of the trunk and park light outputs (i.e. when the built-in relay is needed for the trunk connection but not needed for the park light connection.)**

Setting Choices:

- **Option 1** - Functionality follows **default settings.**
- **Option 2** - The **Trunk Release Output (Dark Blue)** wire works with the Parking Lights function; the **Parking Lights Input (White/Red)** and **Parking Lights Output (White)** wires work with the trunk release function.

### Feature 7: Silent Choice™

Function: **Set audible beeps on or off when arming and disarming the system.**

Setting Choices:

- **Option 1** - Pressing **Lock or Unlock at any time** will perform the function **with audible beeps.**
- **Option 2** - Pressing **Lock or Unlock for 1.5sec** on remote will control system **without an audible beep.**
- **Option 3** - **First press** of Lock or Unlock on the remote control will perform the function **without an audible beep. Second press within 10sec will result in audible beeps.**

### Feature 8: Exterior Illumination

Function: **Set the parking lights to remain on for 30 seconds when the doors are locked or unlocked with the remote control.**

Setting Choices:


- **Option 1** - The lights will function **normally.**
- **Option 2** - The lights will remain on for **30 seconds when the doors are locked** with the remote control.
- **Option 3** - The lights will remain on for **30 seconds when the doors are unlocked** with the remote control.
- **Option 4** - The lights will remain on for **30 seconds when the doors are locked or unlocked** with the remote control.

# Quick Reference: System Programming

## Programming Mode Entry and Exit Procedure

Once the system is installed and powered up, you will use the vehicle ignition, override button and a programmed remote control to set all system options. Feature options are divided into categories, or **Banks**, as described throughout this section. **Ensure that at least one remote control is programmed** to the system. If not, or if you need to program more remote controls, use the diagram steps to access **Bank 1**.

The siren and LED will indicate your status and selections. Follow the diagram below to enter and maneuver through the programming procedure.

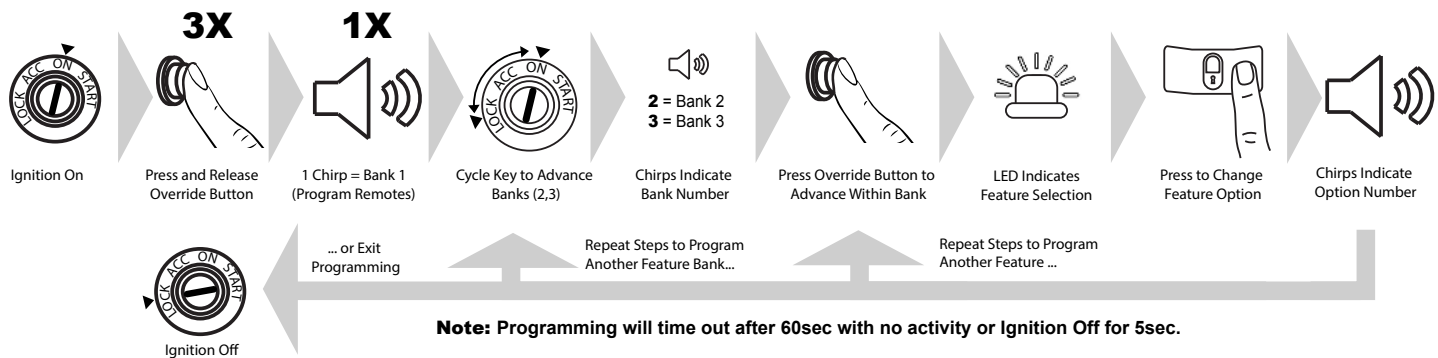

1. Turn the ignition ON.
2. Press and release the valet/override button 3x.
3. The system will beep (1) one time, indicating you have accessed Bank 1.
4. Each cycle of the Ignition, OFF/ON, will advance to the next bank (up to Bank 3) then restart at Bank 2. (Note: To re-access Bank 1 for transmitter programming, you will need to exit and re-enter programming mode.)
5. The system will beep a number of times to indicate the Bank number:
  - 1 beeps: **Bank 1** - [Programming Remote Controls](#)
  - 2 beeps: **Bank 2** - [Security Control Options](#)
6. Once you have accessed the desired bank, press the valet/override button to advance through the features. The LED will flash a number of times to indicate the feature, based on the charts that follow this section. The system will chirp a number of times to indicate the Option programmed.
7. Once you have accessed the desired feature, press the LOCK button on the remote control to advance through the feature's setting options. The system will beep a number of times to indicate the Option setting, based on the charts that follow this section.
8. Once you have made the desired setting, you can press the valet/override button to advance through the features within the bank, or cycle the Ignition key OFF/ON to advance to the next bank.
9. Once you have completed programming, **you MUST turn the ignition key to OFF** to exit the programming mode. Programming will automatically exit after 60sec of inactivity.

# Quick Reference: System Programming

## Bank 1: Transmitter Programming Options [See pages 5 for a detailed description.](#)

Feature Bank 1		Description	
CH:	1	Lock	Press Lock button on remote
	2	Unlock	Press Unlock button on remote
	3	Trunk/Start	Press Start button on remote

## Bank 2: Security Options [See pages 6-7 for detailed descriptions.](#)

Feature Bank 2		Options					
		1 Chirp	2 Chirp	3 Chirp	4 chirp	5 Chirp	6 Chirp
Features	1	Lock / Unlock Function	500ms	3.5sec	500ms L, Dbl UL		
	2	Accessory Lock	OFF	ON			
	3	Accessory Unlock	OFF	ON			
	4	Auto Relock	OFF	Auto Lock	Auto Lock & Arm		
	5	Auto Arming	OFF	Auto Arm	Auto Lock & Arm		
	6	Parking Light/Trunk Swap	OFF	ON			
	7	Silent Choice	OFF	From Transmitter	OEM Style		
	8	Exterior Illumination	OFF	With Arm	With Disarm	With Arm & Disarm	

## Dome Light Delay

### ***To program the Prestige system to wait until the dome light turns off before arming:***

1. Close all doors.
2. With the vehicle ignition off, press LOCK, UNLOCK, LOCK ,UNLOCK, LOCK, UNLOCK, LOCK on the remote control. The dash-mounted LED will turn on.
2. Immediately OPEN then CLOSE the door WITHOUT disarming the system. After the dome light turns off, the LED will flash to indicate programming completion.
3. Disarm and exit the vehicle.

### ***To return the system to default dome light sensing:***

1. Turn the vehicle ignition ON then OFF 3 times, then press and hold the valet button for 5 seconds.
2. The system will beep 1 time indicating the learned delay has been cleared.

# Quick Reference: System Programming & Diagnostics

## Silent Arm and Disarm

Program the Prestige system to arm and disarm without notification beeps. (The siren will sound if the system is triggered while armed.)

1. Turn the ignition ON then OFF.
2. Press and release the valet/programming button three (3) times. The system will respond with one (1) beep for ON or two (2) beeps for OFF.

## User Selectable LED

This feature will control whether the LED is ON or OFF when the system is Armed/Locked. This will be selectable in feature programming OR on-the-fly without entering the programming feature banks.

1. Turn the ignition ON, OFF, ON, OFF.
2. Press and hold valet button for five (5) seconds.

The system will respond with one (1) beep for ON or two (2) beeps for OFF.

## Troubleshooting Trigger Zones

Test the doors, hood, trunk, and shock sensor to ensure they trigger the security system. Once triggered, the LED flashes to indicate the trigger source:

1	Shock
2	Trunk / Hood
3	Door

## Adjusting the Shock Sensor


1. Arm the system, wait 5-10 seconds, then with an open palm carefully apply impact to areas of the vehicle to test the shock sensor's sensitivity.
2. To adjust, turn the adjustment knob on the shock sensor counter-clockwise for less sensitivity; clockwise for more sensitivity.
3. If the proper sensitivity still cannot be achieved, re-locate the shock sensor.

# Quick Reference: Wiring Diagrams

## Door Lock Connections


### Negative-Trigger Door Locks

*Verification:* The vehicle wires register Ground when the Lock and Unlock switches are activated.

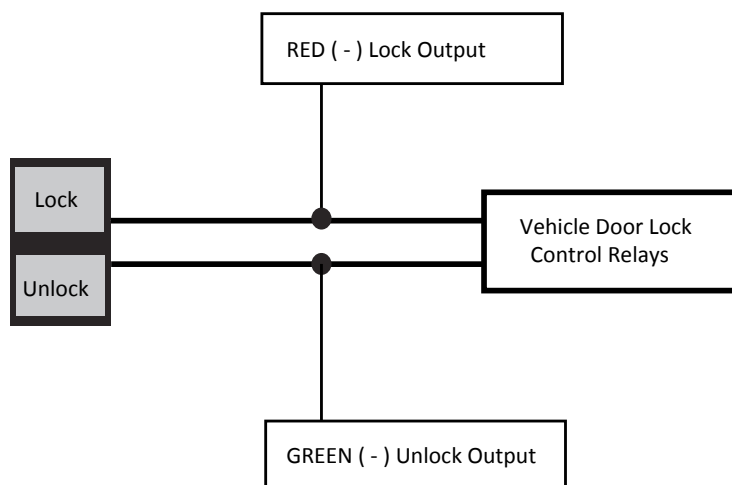

### Positive-Trigger Door Locks

*Verification:* The vehicle wires register 12V+ when the Lock and Unlock switches are activated.

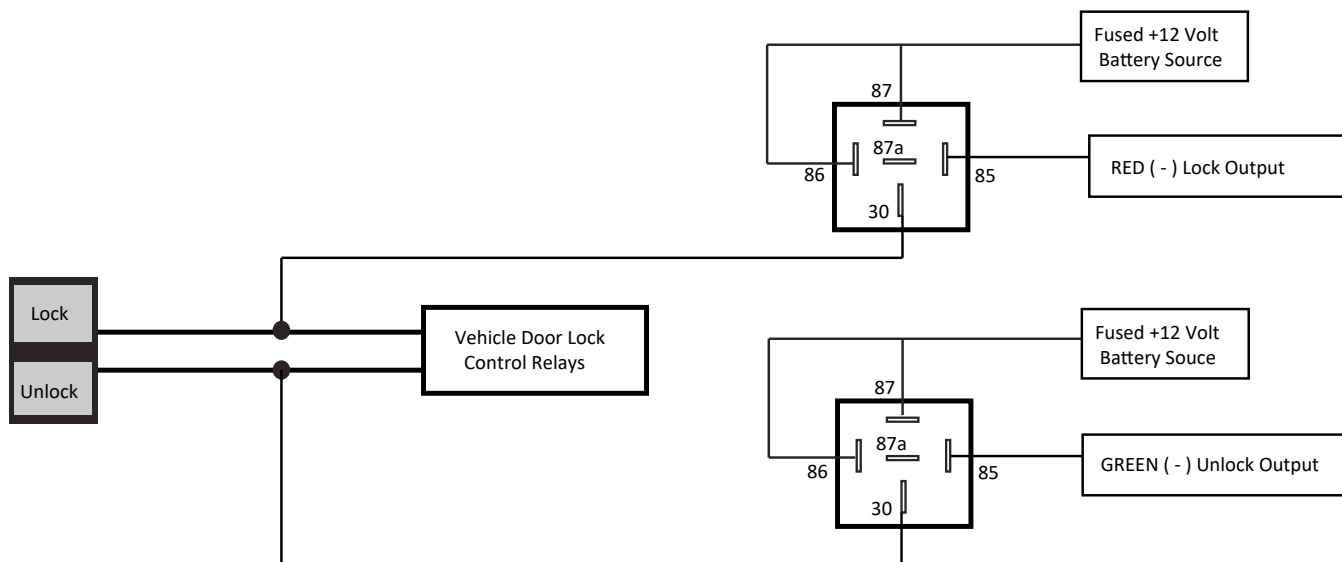


# Quick Reference: Wiring Diagrams

## Door Lock Connections


### Single-Wire Negative Multiplex Door Locks (Relays required)

*Verification:* The vehicle wire registers variable Ground values when the Lock and Unlock switches are activated. Please consult the vehicle-specific wire and location chart for resistor values.

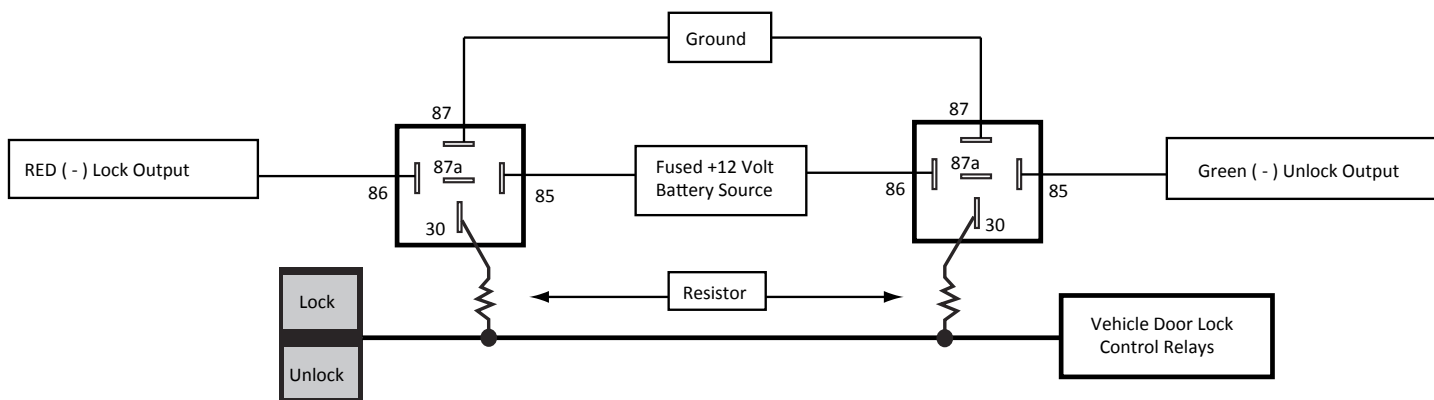

### Single-Wire Positive Multiplex Door Locks (Relays required)

*Verification:* The vehicle wire registers variable 12V+ values when the Lock and Unlock switches are activated. Please consult the vehicle-specific wire and location chart for resistor values.

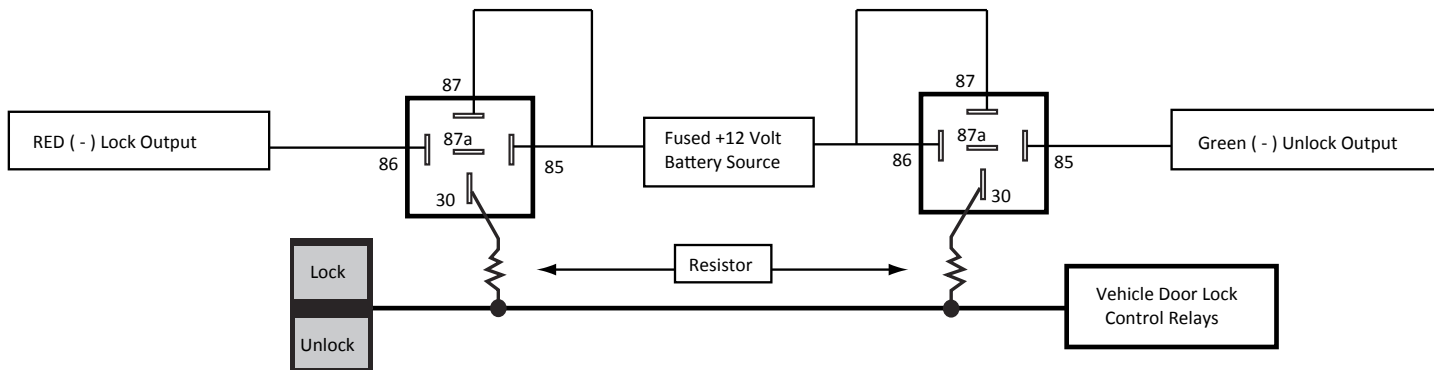


# Quick Reference: Wiring Diagrams


## Door Lock Connections

### Reverse-Polarity Door Locks (Relays required)

Verification: The vehicle wires rest at Ground and register 12V+ when the Lock and Unlock switches are activated.

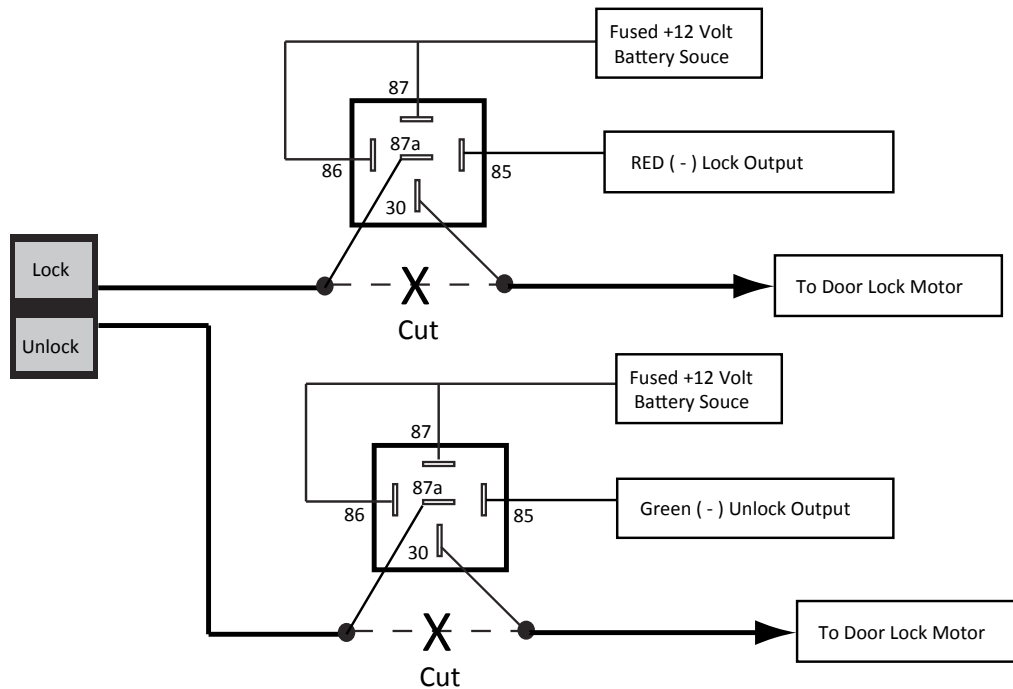


### Aftermarket Actuators (Relays and door lock actuators required)

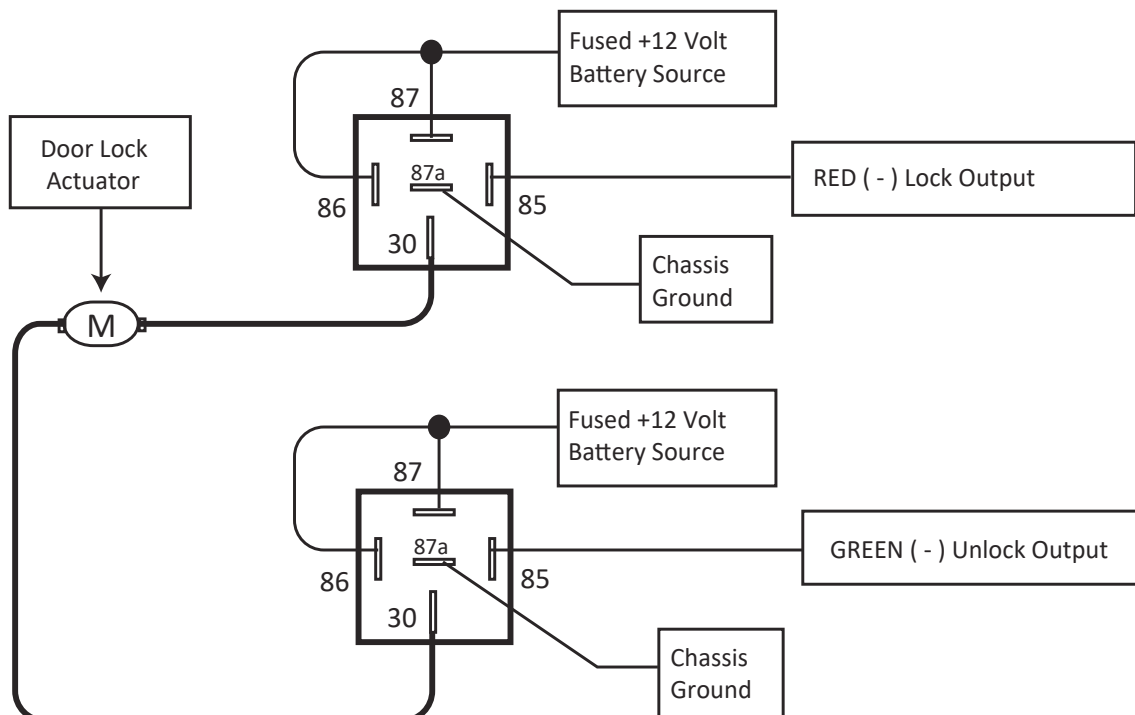

# Quick Reference: Wiring Diagrams

## Starter Kill / Anti-Grind Relay Connections

Included Starter Kill / Anti-Grind Relay

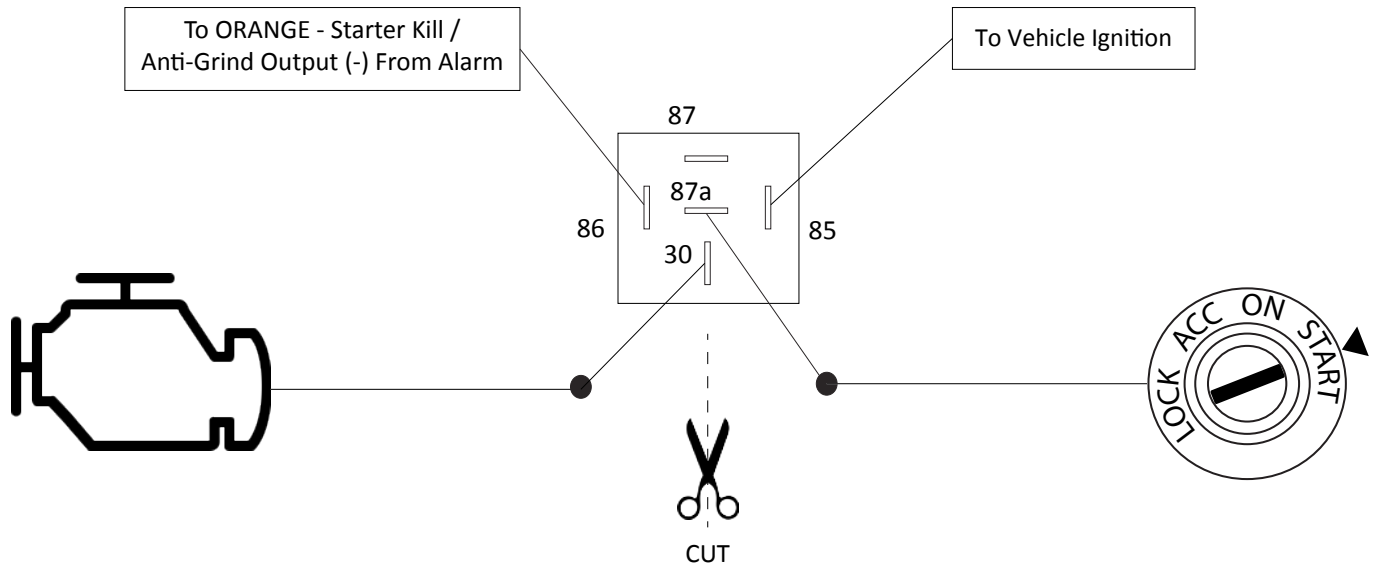

# Quick Reference: Wiring Diagrams

